

OPHORIA™

USER MANUAL



OPHORIA™ is a licensed trademark
www.ophoriatoys.com

© Lover's Choice Inc. 2009 Made in PRC.

A decorative graphic consisting of several overlapping circles of varying sizes and shades of gray, located in the bottom right quadrant of the page.

beyond
G SPOT VIBE

Infusing alluring architecture of design
with the spirit of sensory pleasures.




OPHORIA™ fine bedroom toys is dedicated to elegant design and exquisite quality. Each toy is thoughtfully created with sumptuous pleasure in mind and seamlessly partnered with technical and material excellence.

Enjoy.

The beyond3 G SPOT VIBE infuses alluring architecture of design with the spirit of sensory pleasures. Special features of this vibe include:

- curved form targeting g spot
- 9 vibration modes
- whisper quiet technology™
- one touch operation
- 100% pure silicone body

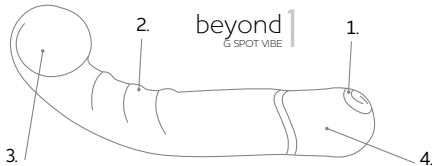

1 ON/OFF Button

- Press and hold for 1 second to turn on
- Press ON/OFF button to cycle through the 9 vibration modes
- Press and hold for 5 seconds to turn off

2 Silicone Body

- Lay flat for stronger vibrations

3 Silicone Tip

- Use tip for softer vibrations

4 Battery Housing

- Twist hard plastic base counter clockwise to open
- Requires 2 × AAA batteries.

5 Pouch

- use pouch to keep vibe clean when not in use
- *ideal for travel

Using your beyond G SPOT VIBE

To insert or replace batteries:

Twist hard plastic base counter-clockwise to open. Insert 2 x AAA batteries into the battery house. See +/- diagram on internal casing for correct placement. Replace hard plastic base and press ON/OFF button to test.

To turn vibe ON or OFF:

Press ON/OFF button for 1 second to turn on. Press and hold ON/OFF button for 5 seconds to turn off.

To cycle through vibration modes:

Press ON/OFF button to cycle through the 9 vibration modes. Pause slightly between each mode to ensure transition.

Other Tips:

- Always use fully charged rechargeable batteries or new batteries.
- Remove batteries during travel.
- Only use high quality water based lubricant with OPHORIA™ vibes.










Troubleshooting

VIBE WON'T TURN ON – check batteries are inserted correctly and/or batteries are fully charged.

VIBE WON'T TURN OFF – hold down ON/OFF button until vibe turns off.

DIFFICULTY DISTINGUISHING BETWEEN MODES – when cycling through modes, pause for minimum of 5 seconds between each to experience full vibration pattern.

OPHORIA™ beyond G SPOT VIBE provides nine unique vibration modes. Each specifically designed to stimulate a variety of sensations.

Mode	Vibration Type	Characteristics	
1		SOFT: tickling and teasing	
2	Continuous Vibrations	INTERMEDIATE: awakening and arousing	
3		INTENSE: exhilarating and exciting	
4		PEAKS: rising and falling	
5	Building Vibrations	TEASER: subtle yet surprising	
6		MAMBO: rhythmic and enticing	
7		SPELLBOUND: sweeping and strumming	
8	Pulsating Vibrations	THRUM: empowering and releasing	
9		QUIVER: trembling and transporting	

TIP: when the beyond G SPOT VIBE is turned ON it always starts at **MODE 1**. To return to **MODE 1** at any time cycle through other 8 modes or turn the vibe OFF and then ON again.

To ensure the longevity of your **beyond G SPOT VIBE**, please follow these simple guidelines:

CLEANING


Always clean your **beyond G SPOT VIBE** thoroughly before and after each use. Wash the silicone body with warm water and antibacterial soap. Rinse with clean hot water and pat dry immediately with a lint-free cloth. Avoid submerging or getting water on or in the hard plastic base or around the ON/OFF button.

Never use massage oil, cream, lubricants or cleaners that contain alcohol, petrol or acetone.

Never use an abrasive brush or cleanser to clean the silicone body.

STORAGE

Place your **beyond G SPOT VIBE** in the protective pouch for best storage. Store in a dry, dust-free place and away from toys made from other materials. Avoid leaving your vibe in direct sunlight and never expose to extreme heat. Remove batteries after use and store separately.

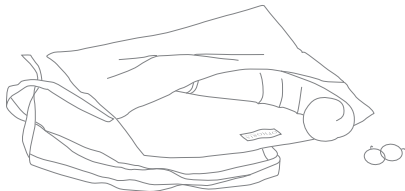

SAFETY

To ensure the longevity of this product please read the user manual in full before use. Do not discard these instructions.

OPHORIA™ fine bedroom toys have been carefully engineered for both performance and safety. Please follow basic safety precautions including the following:

- Do not place product base into or store in water or liquid.
- Do not insert batteries into housing if damp or wet.
- Do not insert batteries if any corrosion present.
- Do not use product if it is not working correctly.
- Do not use if vibrating motor or outer silicone sleeve has been damaged.
- Do not dispose of either the product or batteries in a fire.
- Do not use in conjunction with other products unless recommended by OPHORIA™.
- Do not leave unattended on any surface while it is operating.
- Do not use product on swollen or inflamed areas or broken skin.
- Do not use on sensitive skin areas or areas of poor circulation.
- Do not use for treatment of muscle pain or as a substitute for medical attention.
- Not recommended for use while pregnant.
- Do not use product when sleeping.

If you have concerns regarding your health, consult your doctor before using this product.

OPHORIA™ products are intended for adults only. Use product(s) at your own risk. OPHORIA™ assumes no responsibility or liability for the use or misuse of this product.

Benefits of silicone

OPHORIA™ fine bedroom toys are constructed with Japanese medical grade silicone. Our commitment to quality and material integrity is an integral part of our product design and an ongoing commitment to our consumers

SPECIAL FEATURES

- non-porous material
- hypo-allergenic and ultra-hygienic
- warms quickly to body temperature
- velvety smooth texture
- dynamic material; firm yet flexible
- durable and long lasting



100%
SILICONE



VELVETY
SOFT



SPLASH
PROOF



PHTHALATE
FREE



Product Specs

COLORS: cerise/indigo/noir
*limited edition colors available

MATERIALS: body – medical grade silicone
base – ABS

SIZE: 7½" × 1½" / 190x38 mm

BATTERY: 2 × AAA


WEIGHT: 5.8oz / 165g

USER TIME: 3.5 hours (new set of batteries)

FREQUENCY: 75Hz UP TO 4500RPM

MAX. NOISE LEVEL: <50dB

Product may be changed for improvements without notice.

DISPOSAL: Please dispose of your vibe according to local recycling and waste programs in your area. OPHORIA™ supports the collective effort in limiting the negative impact of waste on the environment. 

WEBSITE

www.ophoriatoys.com

SUPPORT:

customerservice@ophoriatoys.com